


Connectivity

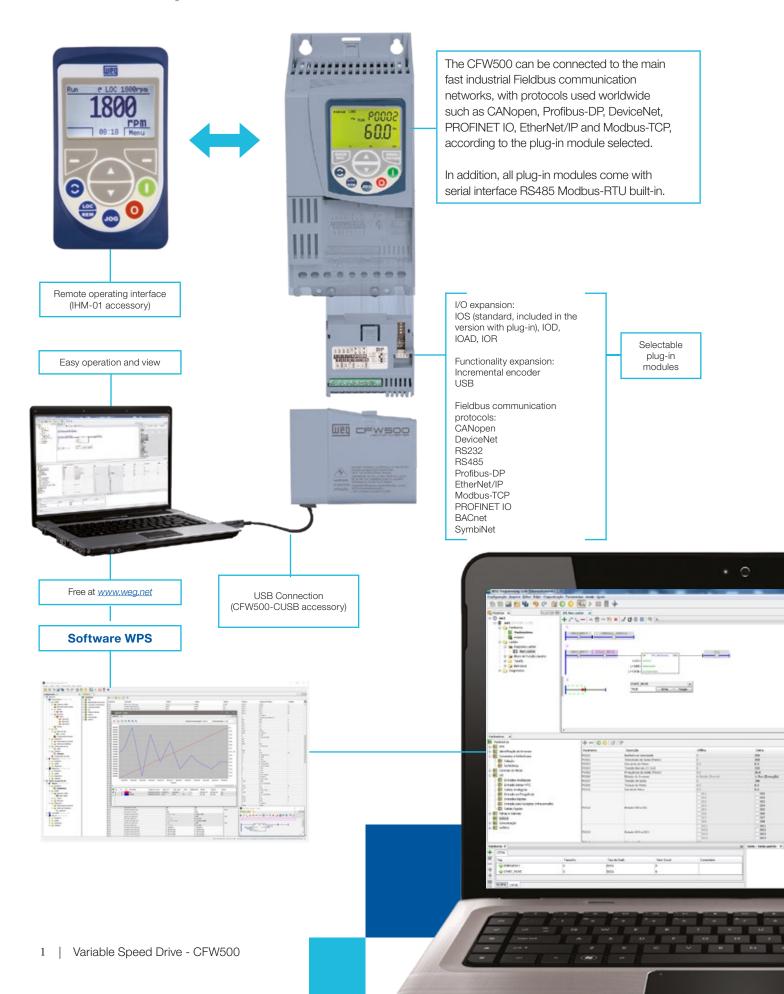



Accessories

Plug-in module

On the CFW500, it is possible leave to choose later the model of the internal plug-in module by entering H00 in item 11 of the smart code. In this case, it is necessary to select the plug-in module as an accessory, according to the table bellow. In case H00 is not selected in item 11 of the smart code, the CFW500 will be supplied with the CFW500-IOS plug-in. You must always use one plug-in module per CFW500.

Due to the different connections, when equipped with the plug-in module with the STO/SS1 safety functions, the inverter will still be able to connect another plug-in module at the user's choice.

	Description	
Reference	Input and output (I/O) expansion	- Illustrative figures
CFW500-IOS ¹⁾	Standard plug-in module (included in the version with plug-in module)	
CFW500-IOD	Digital input and output (I/O) expansion plug-in module	1
CFW500-IOAD	Digital and analog input and output (I/O) expansion plug-in module	
CFW500-IOR-B	Relay output expansion plug-in module	The second
,	Functionality expansion	MANAGE AND ADDRESS OF THE PARTY
CFW500-ENC	Plug-in module with encoder input	
CFW500-CUSB	Plug-in module with USB port	The same of the sa
CFW500-SFY2 ²⁾	Plug-in module with security function STO e SS1	BASSOCIATION
<u> </u>	Communication on Fieldbus network	lanet.
CFW500-CCAN	CAN communication plug-in module (CANopen/DeviceNet)	· water
CFW500-CRS232	RS232 communication plug-in module	Macagar Mar
CFW500-CRS485-B	RS485 communication plug-in module	Secretary and the second
CFW500-CPDP	Profibus-DP communication plug-in module	A Print
CFW500-CETH-IP	EtherNet/IP communication plug-in module	72.00 (a)
CFW500-CEMB-TCP	Modbus-TCP communication plug-in module	
CFW500-CEPN-IO	PROFINET IO communication plug-in module	1
CFW500-CETH2	EtherNet Dual Port communication plug-in module	1
	Memory	
CFW500-MMF	Flash memory module	
	Interfaces	
CFW500-HMIR	Remote operating interface (HMI)	(Second)
HMI-01	Alphanumeric HMI	500°
CFW500-RHMIF	Frame for remote HMI	S⊕ S
CFW500-CCHMIR1M	1-meter cable set for remote operating interface (HMI)	
CFW500-CCHMIR2M	2-meter cable set for remote operating interface (HMI)	
CFW500-CCHMIR3M	3-meter cable set for remote operating interface (HMI)	1500
CFW500-CCHMIR5M	5-meter cable set for remote operating interface (HMI)	
CFW500-CCHMIR75M	7.5-meter cable set for remote operating interface (HMI)	6
CFW500-CCHMIR10M	10-meter cable set for remote operating interface (HMI)	
	Description	
CFW500-KN1A	NEMA1 kit - size A (standard for option N1)	Blockhous
CFW500-KN1B	NEMA1 kit - size B (standard for option N1)	Si chiaco
CFW500-KN1C	NEMA1 kit - size C (standard for option N1)	
CFW500-KN1D	NEMA1 kit - size D (standard for option N1)	
CFW500-KN1E	NEMA1 kit - size E (standard for option N1)	1.60000
CFW500-KN1F	NEMA1 kit - frame F (standard for option N1)	77
CFW500-KN1G	NEMA1 kit - frame G (standard for option N1)	-
CFW500-KPCSA	Shielding kit for the power cables - size A (standard for option C2 and C3)	Alleron.
CFW500-KPCSB	Shielding kit for the power cables - size B (standard for option C2 and C3)	The state of the s
CFW500-KPCSC	Shielding kit for the power cables - size C (standard for option C2 and C3)	- Indiana
CFW500-KPCSD	Shielding kit for the power cables - size D (standard for option C2 and C3)	
CFW500-KPCSE	Shielding kit for the power cables - size E (standard for option C2 and C3)	74.50
CFW500-KPCSF	Shielding kit for the power cables - size F (standard for option C3)	W. B. Calendar
CFW500-KPCSG	Shielding kit for the power cables - size G (standard for option C3)	

Notes: 1) Accessory already included if the CFW500 version with the standard plug-in module is selected. The plug-in modules can also be sold separately as an accessory item or spare part.

²⁾ Due to the different connections, when equipped with the plug-in module with the STO/SS1 safety functions, the inverter will still be able to connect another plug-in module at the user's choice.



Accessories

Configuration of the plug-in modules¹⁾

		Functions																
Plug-in module	Inputs		Outputs		CTO/	uen	lumint fam	Fieldbus networks								Supply		
	Digital	Analog	Analog	Digital relay	Digital transistor	STO/ SS1	USB port	Input for encoder ³⁾	CANopen DeviceNet	RS232	RS485	Profibus-DP	EtherNet/IP	Modbus-TCP	PROFINET IO	BACnet 5)	10 V	24 V
CFW500-IOS	4	1	1	1	1	-	-	-	-	-	1	-	-	-	-	1	1	1
CFW500-IOD	8	1	1	1	4	-	-	-	-	-	1	-	-	-	-	-	1	1
CFW500-IOAD	6	3	2	1	3	-	-	-	-	-	1	-	-	-	-	-	1	1
CFW500-IOR-B	5 ²⁾	1	1	4	1	-	-	-	-	-	1	-	-	-	-	-	1	1
CFW500-ENC	5 ²⁾	1	1	4	1	-	-	1	-	-	1	-	-	-	-	-	16)	1
CFW500-CUSB	4	1	1	1	1	-	1	-	-	-	1	-	-	-	-	-	1	1
CFW500-SFY2 ⁴⁾	-	-	-	-	-	2	-	-	-	-	-	-	-	-	-	-	-	-
CFW500-CCAN	2	1	1	1	1	-	-	-	1	-	1	-	-	-	-	-	1	-
CFW500-CRS232	2	1	1	1	1	-	-	-	-	1	1	-	-	-	-	-	-	1
CFW500-CRS485-B	4	2	1	2	1	-	-	-	-	-	2	-	-	-	-	1	1	1
CFW500-CPDP	2	1	1	1	1	-	-	-	-	-	1	1	-	-	-	-	-	1
CFW500-CETH-IP	2	1	1	1	1	-	-	-	-	-	1	-	1	-	-	-	-	1
CFW500-CEMB-TCP	2	1	1	1	1	-	-	-	-	-	1	-	-	1	-	-	-	1
CFW500-CEPN-IO	2	1	1	1	1	-	-	-	-	-	1	-	-	-	1	-	-	1
CFW500-CETH2	2	1	-	-	1	-	-	-	-	-	2	-	2	2	-	-	-	1

Notes: 1) All plug-in models have at least one RS485 port. The CFW500-CRS485 plug-in module has two RS485 ports.

The CFW500 allows the installation of one plug-in module per unit.

- 2) The digital input DI5 is always NPN, and it cannot be configured for PNP like the others.
- 3) Incremental encoder (A/A B/B).
- See the installation guides of the plug-in modules on the website www.weg.net.

 4) Due to the different connections, when equipped with the plug-in module with the STO/SS1 safety functions, the inverter will still be able to connect another plug-in module at the user's choice.
 5) For products with software version above 3.7x.
- 6) Power supply of the enconder.

